

## RULES FOR THE INSTALLATION OF DIVINA CORK WALLS SERIES R-Thin Papers

Please read these instructions carefully in conjunction with the relevant country norms before starting the installation.

### SAFETY INSTRUCTIONS

Use abrasive resistant gloves during the handling of the product.

In case of using tools or cutting equipments, use gloves and goggles appropriate to the risks inherent to these operations.

In case of using adhesives, use adequate breathing protection and keep out the reach of children.



### Substrates


The substrate must be flat, smooth, permanently dry, firm and free of cracks, dirt and adhesion-inhibiting substances • old chalk, adhesive, oil and paint traces should be roughened with a wire brush, to obtain a substrate with absorption • waste oil must be completely removed • the surface of any suitable type of substrate must be structurally sound and strong, secured, fixed, clean and free of all oil, grease, wax, dirt, varnish, lacquer, or any contaminant that can act as a bond inhibitor • the irregularities should be leveled with an appropriate leveling compound • gypsum plaster, and plaster card tiles as well as other highly absorbent substrates should be primed (WAKOL D 3040, diluted 1:1 with water) • refer to the primer package label for dilution and drying time.

### Laying DIVINA CORK WALLS SERIES R-Thin Papers

Packaged rolls and adhesive must be acclimated at work in a dry, well-ventilated area for a minimum of 48 hours • remove the cork rolls from the retractable film package 48-72 hours before the installation • during installation, maintain temperature and R.H. to consistent level with the conditions that will prevail when building is occupied • this means keeping the temperature range of 15 °C to 25 °C (59 °F to 77°F) and the R.H. range from 45% to 65%.


#### Tools Required

Seam roller • level • pencil • smooth brush • tape measure • ruler  
• mohair short hair roller • cloth • craft knife.

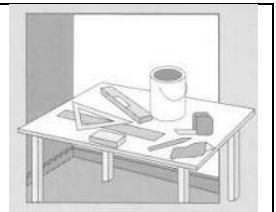


### Measures

Draw a plumb line (vertical line) at the mark with a level • this is your guide where your two strips of SERIES R -Thin papers roll will meet.

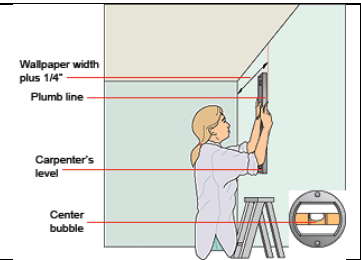

Install Divina Cork Walls SERIES R -Thin papers using Henkel Thomsit K188E/Wakol D3360 or a solvent contact adhesive, according to ambient conditions of the room • for the correct application follow the instructions on the adhesive packaging label, very carefully, as well as information from technical data sheets • check the size of the wall by measuring from the line vertical line to the corner • ensure that the widths of the rolls that are near the corners are identical and greater than 5 cm • if necessary, repeat the previous step, drawing new line parallel to the first one.

Stir the adhesive before use • apply the adhesive Henkel Thomsit K188E/Wakol D3360 to the wall with short hair mohair roller • avoid pooling of adhesive • coverage must be 200-300g/sqm • Unilateral gluing is advisable • wait until the adhesive dries (about 30-50 minutes).

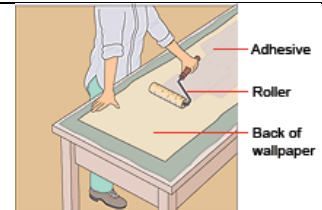




Similar image but applying the adhesive in the wall

**Drying time Henkel Thomsit K188E/Wakol D3360** : 30 to 50 minutes.

**Open Time Henkel Thomsit K188E/Wakol D3360** : 2 hours • high temperatures and low RH will shorten the time • low temperatures and high RH will extend the time.

You can check that the adhesive is dry when the film turns into a transparent-yellow color, meaning that the water has evaporated from the adhesive • once dry and pressing with your finger it will get wet • carefully align the first roll to the marked plumb line • do not apply too much pressure when installing the rolls in place, so you will be able to remove if necessary • when the roll is in place, press with your hands to ensure that all parts are in contact with the adhesive on the wall • go with the brush over the entire area of the roll • then use the seam roller to ensure that the roll is fixed to the wall • proceed the same way with the next rolls.

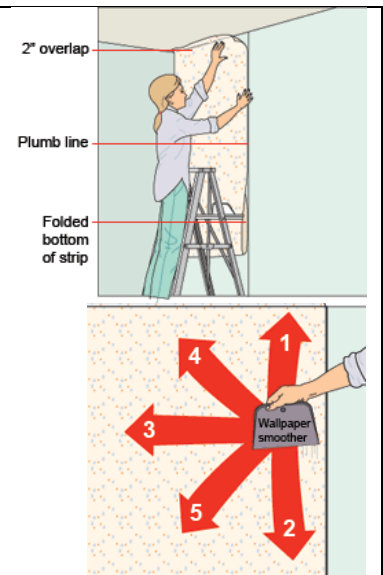

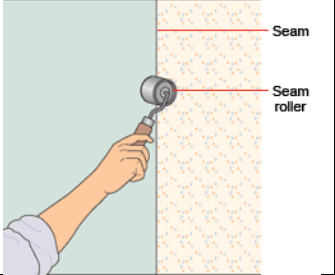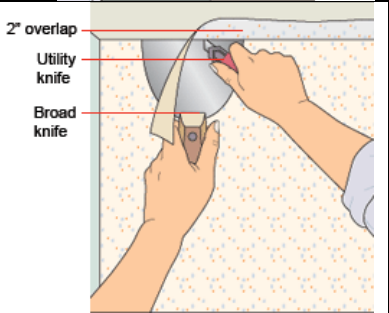	 <p>Seam Seam roller</p>
<p>Cut the rolls to the required size • proceed as shown in the picture.</p>	 <p>2" overlap Utility knife Broad knife</p>